ARAT Telephone mount

Type: Mercedes M class
Model 2002 onwards
(also with ex-works
navigation system)

Part No: 1257.1

ARAT GmbH
Spezialhalterungen
für Autotelefone u.-Navigationssysteme

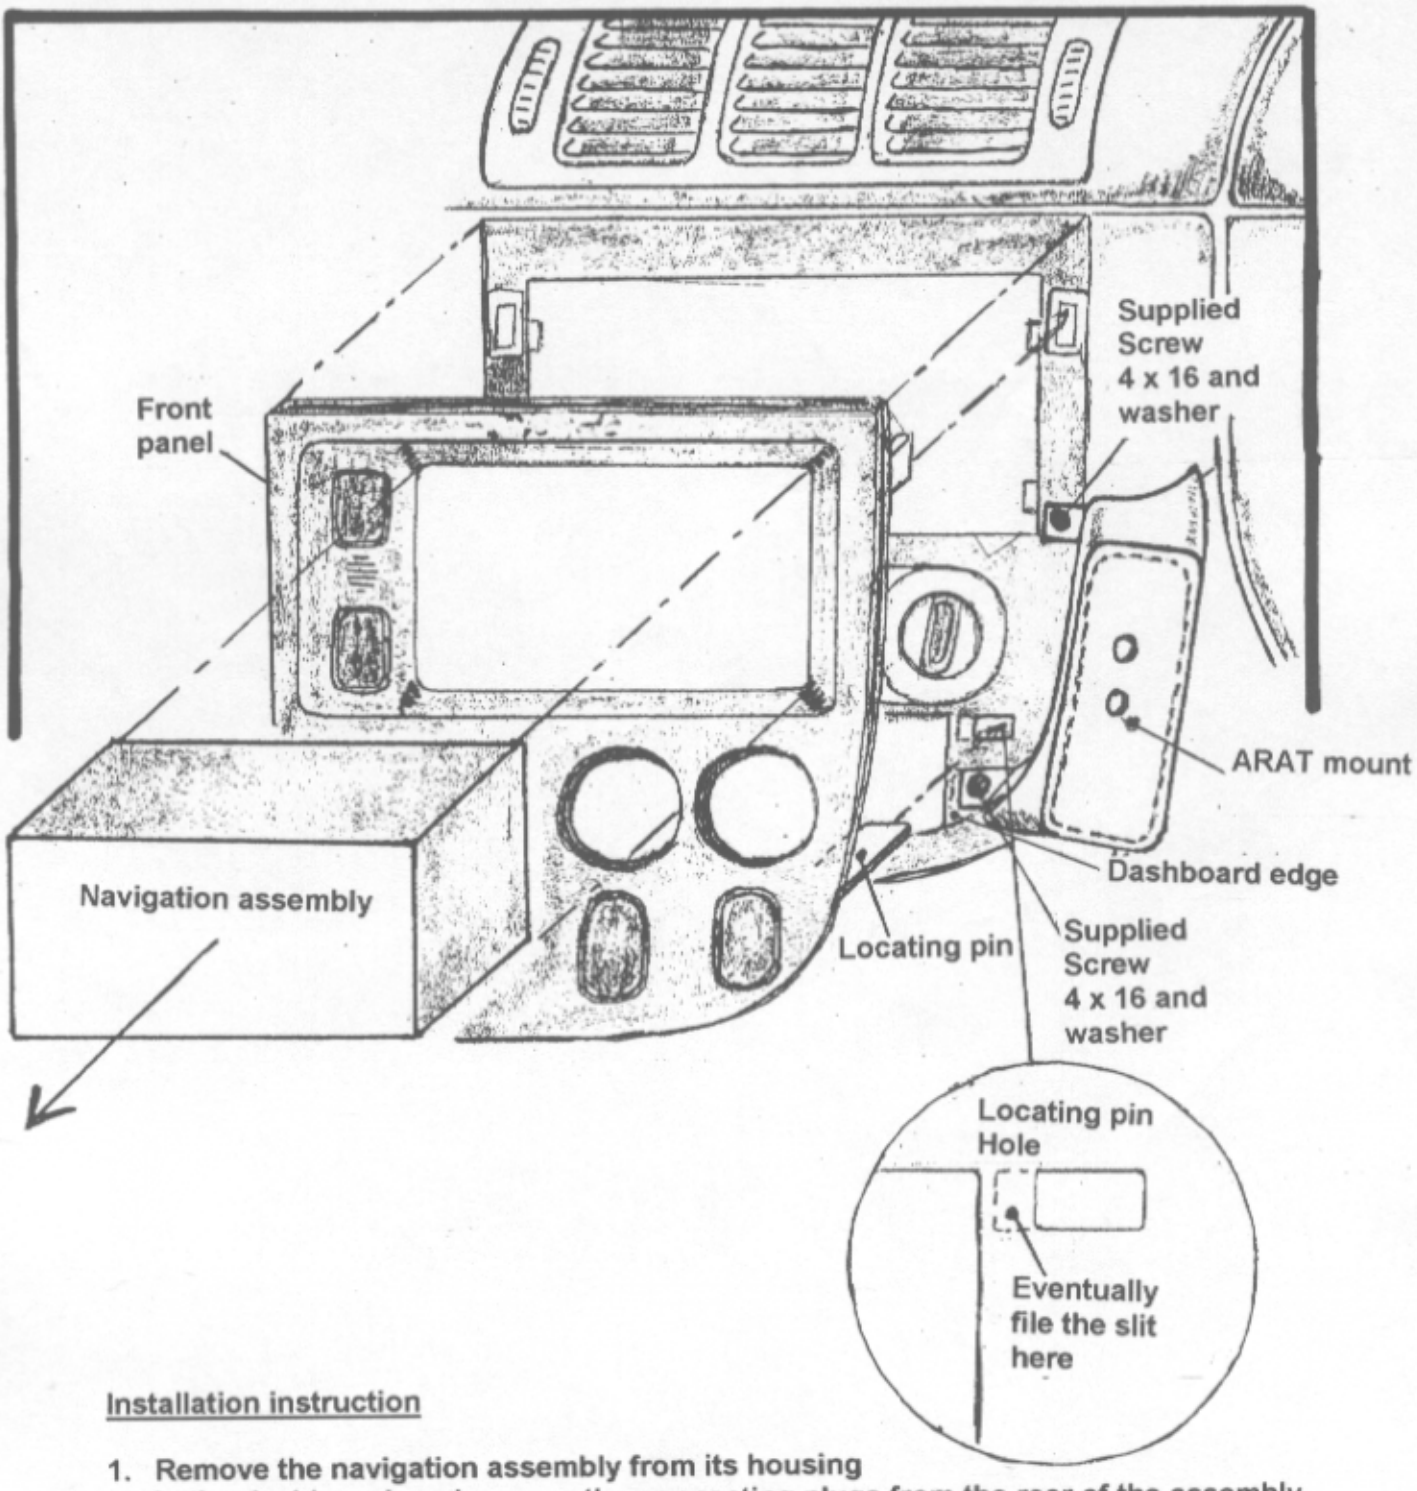

Installation instruction

1. Remove the navigation assembly from its housing in the dashboard, and remove the connecting plugs from the rear of the assembly
2. Remove / pull off the front panel from its spring clips
3. Place the ARAT mount to the contours of the dashboard
4. Secure the mount with the supplied screws through the dashboard edge material, placing the washers behind the dashboard, and screwing the screws into the washer
5. Replace the front panel and navigation assembly